



Concrete Anchoring Instructions (drop-in and wedge anchors):

Here are the basic steps for anchoring Frame Tents to concrete. You will need these 7 items: 1. wedge anchors 2. drop-in anchors 3. set tool (for 1/2" anchors) 4. I-bolts 5. hammer drill 6. 3 lb sledge 7. socket wrench


- After the frame of your tent is erected DRILL (1) hole at each base plate and (1) hole for each ratchet strap/anchor rope
- The depth of the holes is determined by the length of the anchors (wedge anchor holes should be 1 in. shorter)

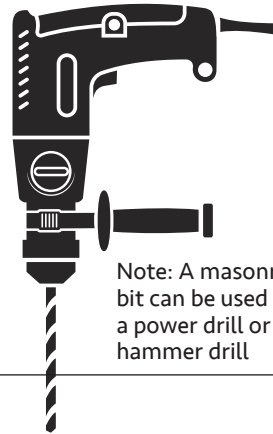

Note: A masonry bit can be used with a power drill or hammer drill

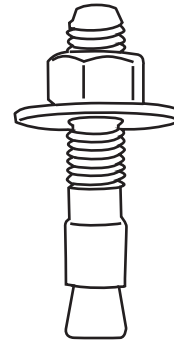

WEDGE Anchor
 .375" x 3"
 - or -
 .5" x 3.75"
 EXTERIOR USE:
 • galvanized
 • 304 stainless
 • 316 stainless (SALTWATER EXPOSURE)
HOLE SIZE:
 3/8 or 1/2 in.

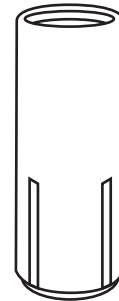


DROP-IN Anchor
 .5" x 2"
 - or -
 .5" x 2.25"
HOLE SIZE:
 5/8 inch

- Typically WEDGE anchors are used for base plates and DROP-IN anchors are used for the ratchet straps—these sizes are recommended

Wedge Anchors:


- Tap ANCHOR into hole
- Position washer and nut, then secure with wrench

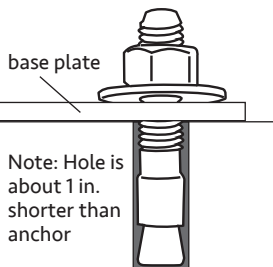

Note: Hole is about 1 in. shorter than anchor

Drop-in Anchors:

- Insert I-BOLT into anchor, (half-way)
- HAMMER half-way into the hole

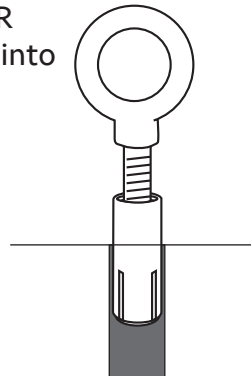


Drop-in Anchors:

- Next, remove I-bolt—use the SET TOOL to drive drop-in anchor flush to the concrete surface (tool size: for 1/2 in. anchors)




Note: These holes and anchors are at the spot where the ratchet straps connect to the ground (approx. 5 ft. from leg poles)

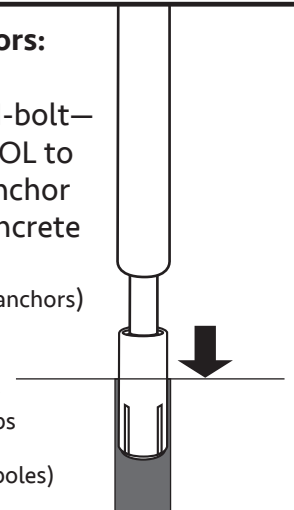

Drop-in Anchors:

- The set-tool helps to drive anchor without damaging rim— also it spreads the bottom, increasing the hold strength

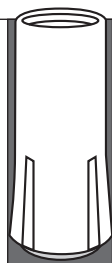

Note: Once the drop-in anchor is in place it will not come out— Using silicone caulk to cover it, after tent removal, allows for protection for repeat usage

Drop-in Anchors:

- There are two methods of attaching the ratchet straps; D-ring under the I-bolt - or - Tied to the ring itself

